


TOTE Wrap-Around Tote Tank / IBC Heater

Product Highlights

- ✓ Designed for caged, plastic, or metal tote tanks / IBCs
- ✓ Wrap-around blanket design allows you to heat a tote tank / IBC from the outside to avoid contamination inside
- ✓ Does not contaminate or scorch your product
- ✓ Two separate heat zones allow you to adjust heater output when content levels decrease
- ✓ **CE RoHS** Compliant 



Heats caged and metal IBCs with ease.



Perfect for plastic tote tanks. Heat does not scorch surface.

The Features You Need:

Controls temperature easily with adjustable thermostats.



Protects contents and tote tank surface from heat damage with manual reset high-limit safety thermostats.



Fits several tote tank sizes with adjustable nylon straps and buckles.


Includes standard plug for an easy electrical connection.

TOTE Wrap-Around Tote Tank / IBC Heater continued

Specifications:

- Full coverage plug-and-play system
- Fits any tote tank from 40" x 40" (1016mm x 1016mm) to 48" x 48" (1219mm x 1219mm)
- Three standard height sizes: 36" (914mm), 42" (1067mm), 48" (1220mm)
- Two separate heat zones (top and bottom)
- Adjustable thermostat: 50-160°F (10-71°C)
- Built-in manual reset high-limit safety thermostat set at 195°F (91°C) for each heat zone
- Attachment method: adjustable nylon straps with buckles
(Two across the top and three around the tank)
- Silicone impregnated cloth facing and liner
- 1/4" (6mm) fiberglass insulation
- "Mouse hole" designed for spigot
- Patented ground for your safety
- 120 / 240VAC
- Total wattage: 120VAC = 1440 watts
240VAC = 2880 watts
- Power cord 6-foot (1.8M) long with standard 3-prong power plug:
120VAC = NEMA 5-15
240VAC = NEMA 6-15
- Optional insulated top cover [reduces heat loss and accelerates heat-up]

How to Measure Your Tote Tank / IBC:

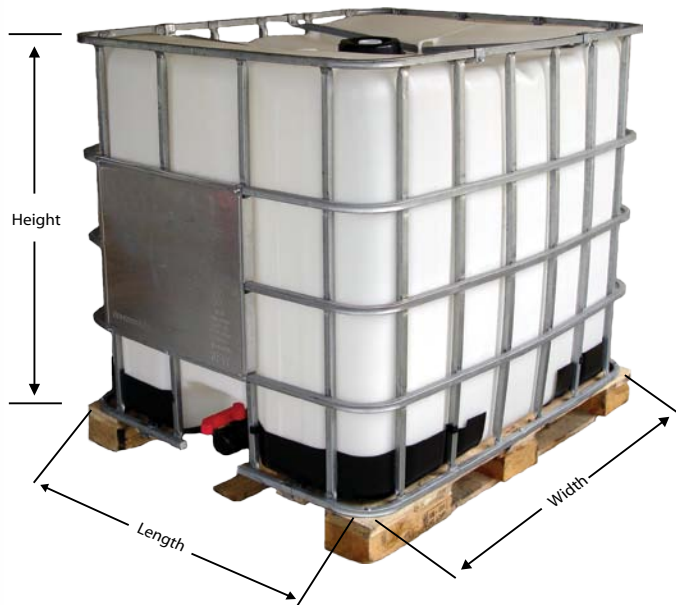

1. Measure the height of the tote tank / IBC **not including the pallet or support stand.**

_____ Height

2. Measure the length and width of the tank. This determines the tank perimeter for the heated area.

$$\frac{\text{_____}}{\text{Tank Length}} \times 2 + \frac{\text{_____}}{\text{Tank Width}} \times 2 = \frac{\text{_____}}{\text{Tank Perimeter}}$$

Note: If tank perimeter measurement is below 160" (4064mm) or above 192" (4877mm), contact factory for heater recommendation.

Ordering Information:

240VAC model and top insulator is strongly recommended for applications that involve heat-up and melting due to the higher wattage.

| Height in (mm) | Tank Perimeter Minimum | Tank Perimeter Maximum | Total Wattage 120V / 240V | Weight lb (kg) | Part Number 120VAC | Part Number 240VAC |
|----------------|------------------------|------------------------|---------------------------|----------------|--------------------|--------------------|
| 36" (914) | 160" (4064) | 192" (4877mm) | 1440 / 2880 | 34 (15) | TOTE361-ADJ | TOTE362-ADJ |
| 42" (1067) | 160" (4064) | 192" (4877mm) | 1440 / 2880 | 40 (18) | TOTE421-ADJ | TOTE422-ADJ |
| 48" (1220) | 160" (4064) | 192" (4877mm) | 1440 / 2880 | 46 (21) | TOTE481-ADJ | TOTE482-ADJ |

Celsius Label Option: Add a "-C" at the end of the part number.

Accessories:

| Part Number | Description |
|-------------|---------------------|
| TOTE-TOP | Insulated top cover |



Insulated top cover minimizes heat loss.

Other Sizes and Designs Available: Contact your local distributor or BriskHeat® for more information.